
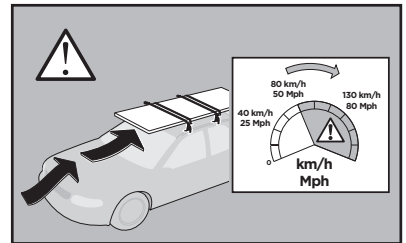
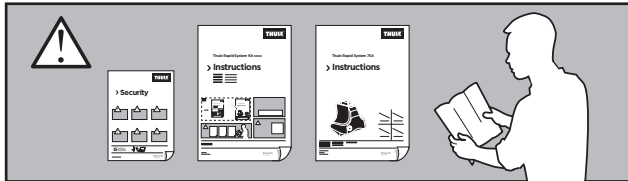
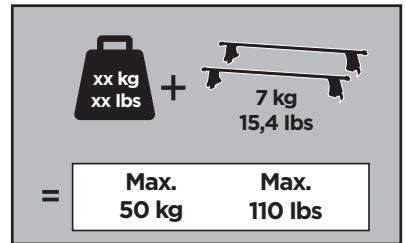


Thule Rapid System Kit 1351

> Instructions

LANCIA Ypsilon, 3-dr Hatchback, 03-

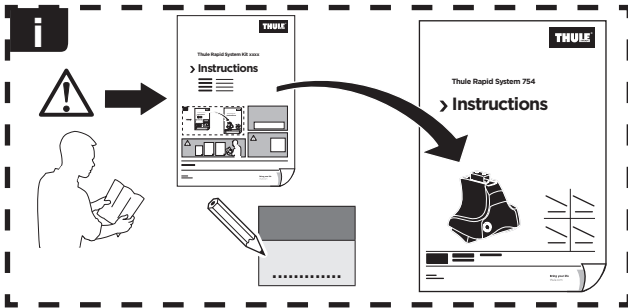

ISO 11154-E

141351


C.20130117
519-1351-01

Bring your life


thule.com




66 x2



163 x1



164 x1




628 x2



666 x2






x1



x1

1



	X (scale)	X (mm)	X (inch)
LANCIA Ypsilon, 3-dr Hatchback, 03-	31	961	37 ⁷ / ₈

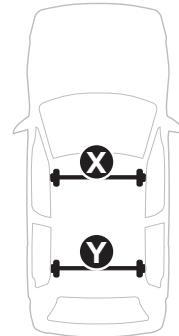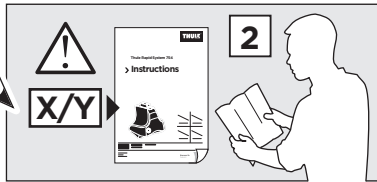
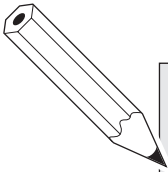


	Y (scale)	Y (mm)	Y (inch)
LANCIA Ypsilon, 3-dr Hatchback, 03-	31,5	966	38

2

LANCIA Ypsilon, 3-dr Hatchback, 03-

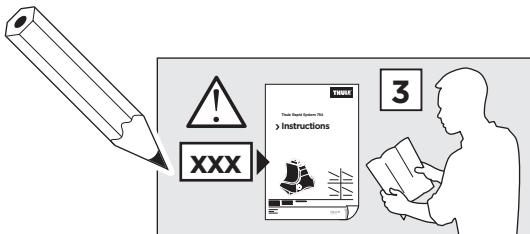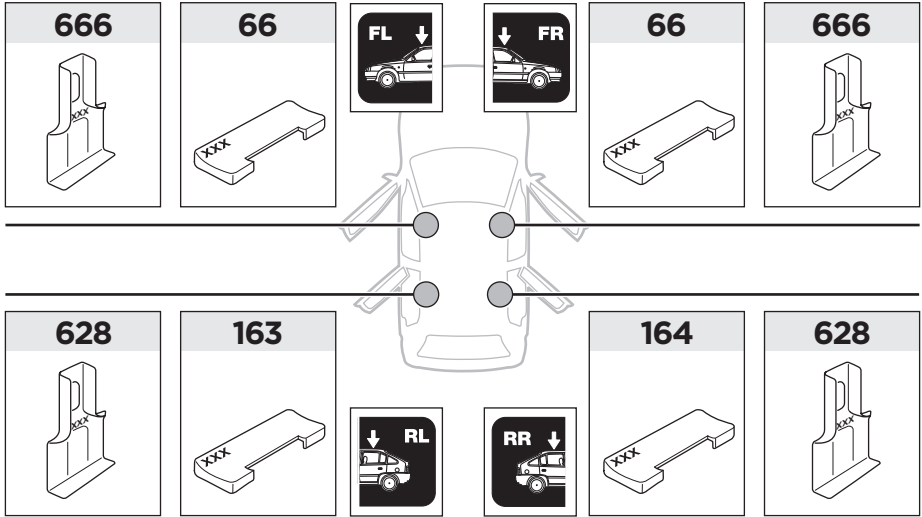

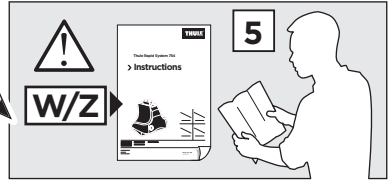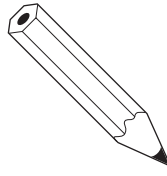3

	W (mm)	Z (mm)	W (inch)	Z (inch)
LANCIA Ypsilon, 3-dr Hatchback, 03-	400	710	15 ³/₄	28

