







Thule Rapid System Kit 1658

> Instructions

DODGE Journey, 5-dr SUV, 12- / *13- (Without railing)

FIAT Freemont, 5-dr SUV, 12- (Without railing)

*North America

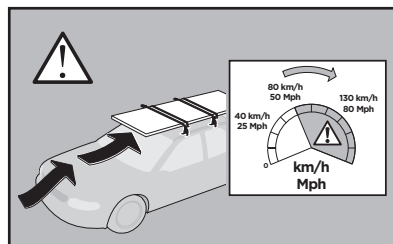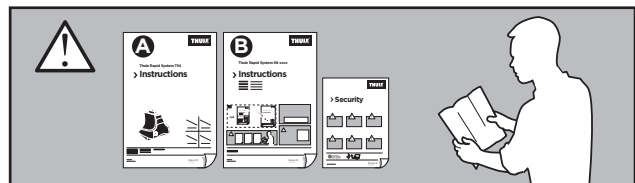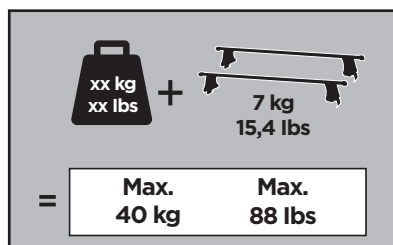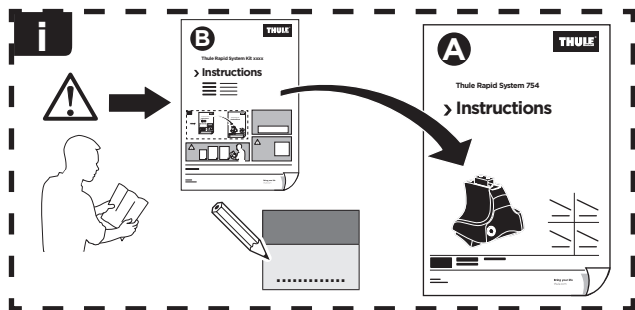


ISO 11154-E

141658


C.20130704
519-1658-01

Bring your life
thule.com

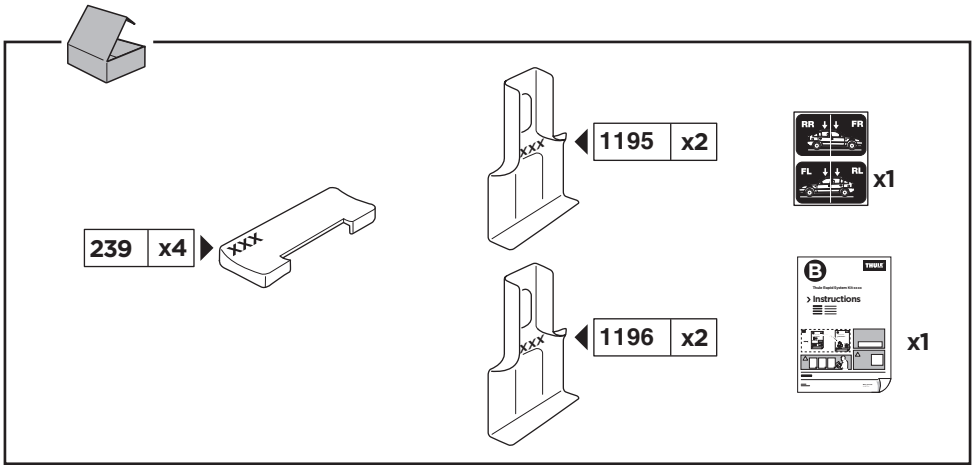

1

	X (scale)	X (mm)	X (inch)
DODGE Journey , 5-dr SUV, 12- / *13-	53	1181	46 1/2
FIAT Freemont , 5-dr SUV, 12-	53	1181	46 1/2


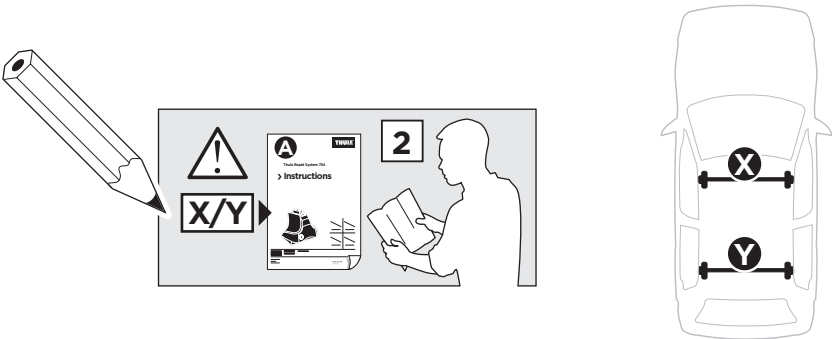



	Y (scale)	Y (mm)	Y (inch)
DODGE Journey , 5-dr SUV, 12- / *13-	49,5	1146	45 1/8
FIAT Freemont , 5-dr SUV, 12-	49,5	1146	45 1/8

2

DODGE Journey, 5-dr SUV, 12- / *13-

FIAT Freemont, 5-dr SUV, 12-

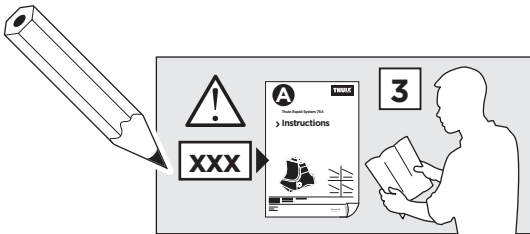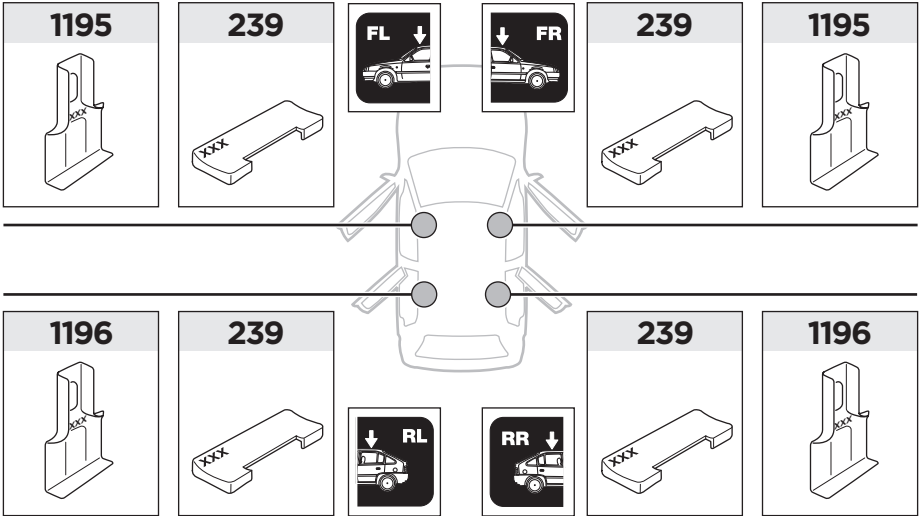

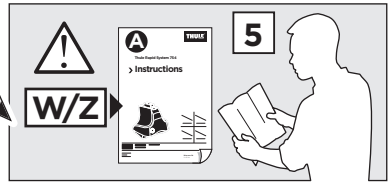3

	W (mm)	Z (mm)	W (inch)	Z (inch)
DODGE Journey , 5-dr SUV, 12- / *13-	438	711	17 1/4	28
FIAT Freemont , 5-dr SUV, 12-	438	711	17 1/4	28

