



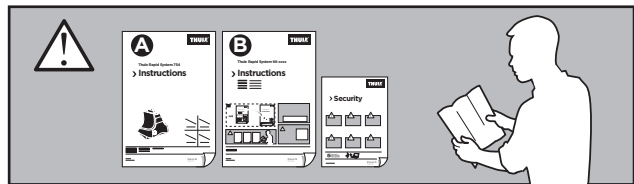

# Thule Rapid System Kit 1583

# > Instructions

HONDA Stepwgn, 5-dr MPV, 09-

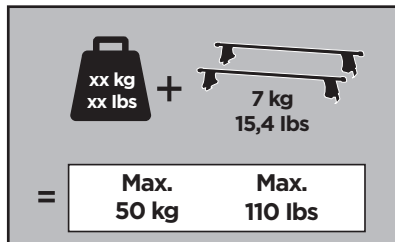

ISO 11154-E


141583

C.20130617  
519-1583-01

Bring your life  
thule.com



345 x4



1116 x2



1117 x2






x1



x1

1


	X (scale)	X (mm)	X (inch)
HONDA Stepwgn, 5-dr MPV, 09-	51	1161	45 <sup>3</sup> / <sub>4</sub>

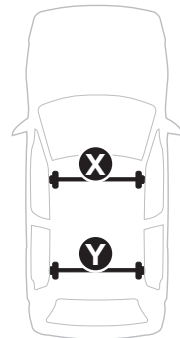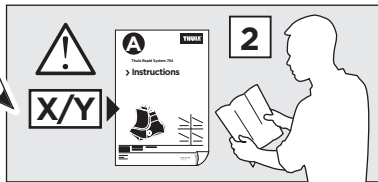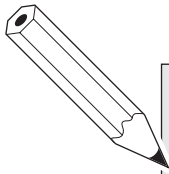


	Y (scale)	Y (mm)	Y (inch)
HONDA Stepwgn, 5-dr MPV, 09-	47,5	1126	44 <sup>3</sup> / <sub>8</sub>

2

HONDA Stepwgn, 5-dr MPV, 09-

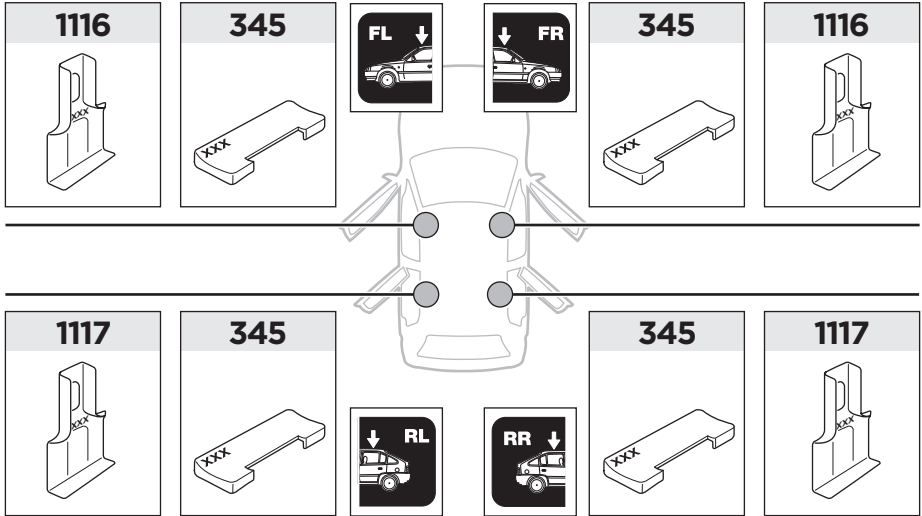

3

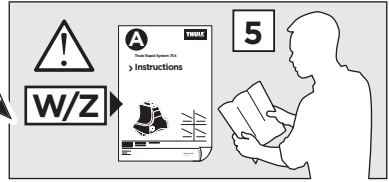

	W (mm)	Z (mm)	W (inch)	Z (inch)
<b>HONDA Stepwgn, 5-dr MPV, 09-</b>	<b>750</b>	<b>700</b>	<b>29 1/2</b>	<b>27 1/2</b>

